








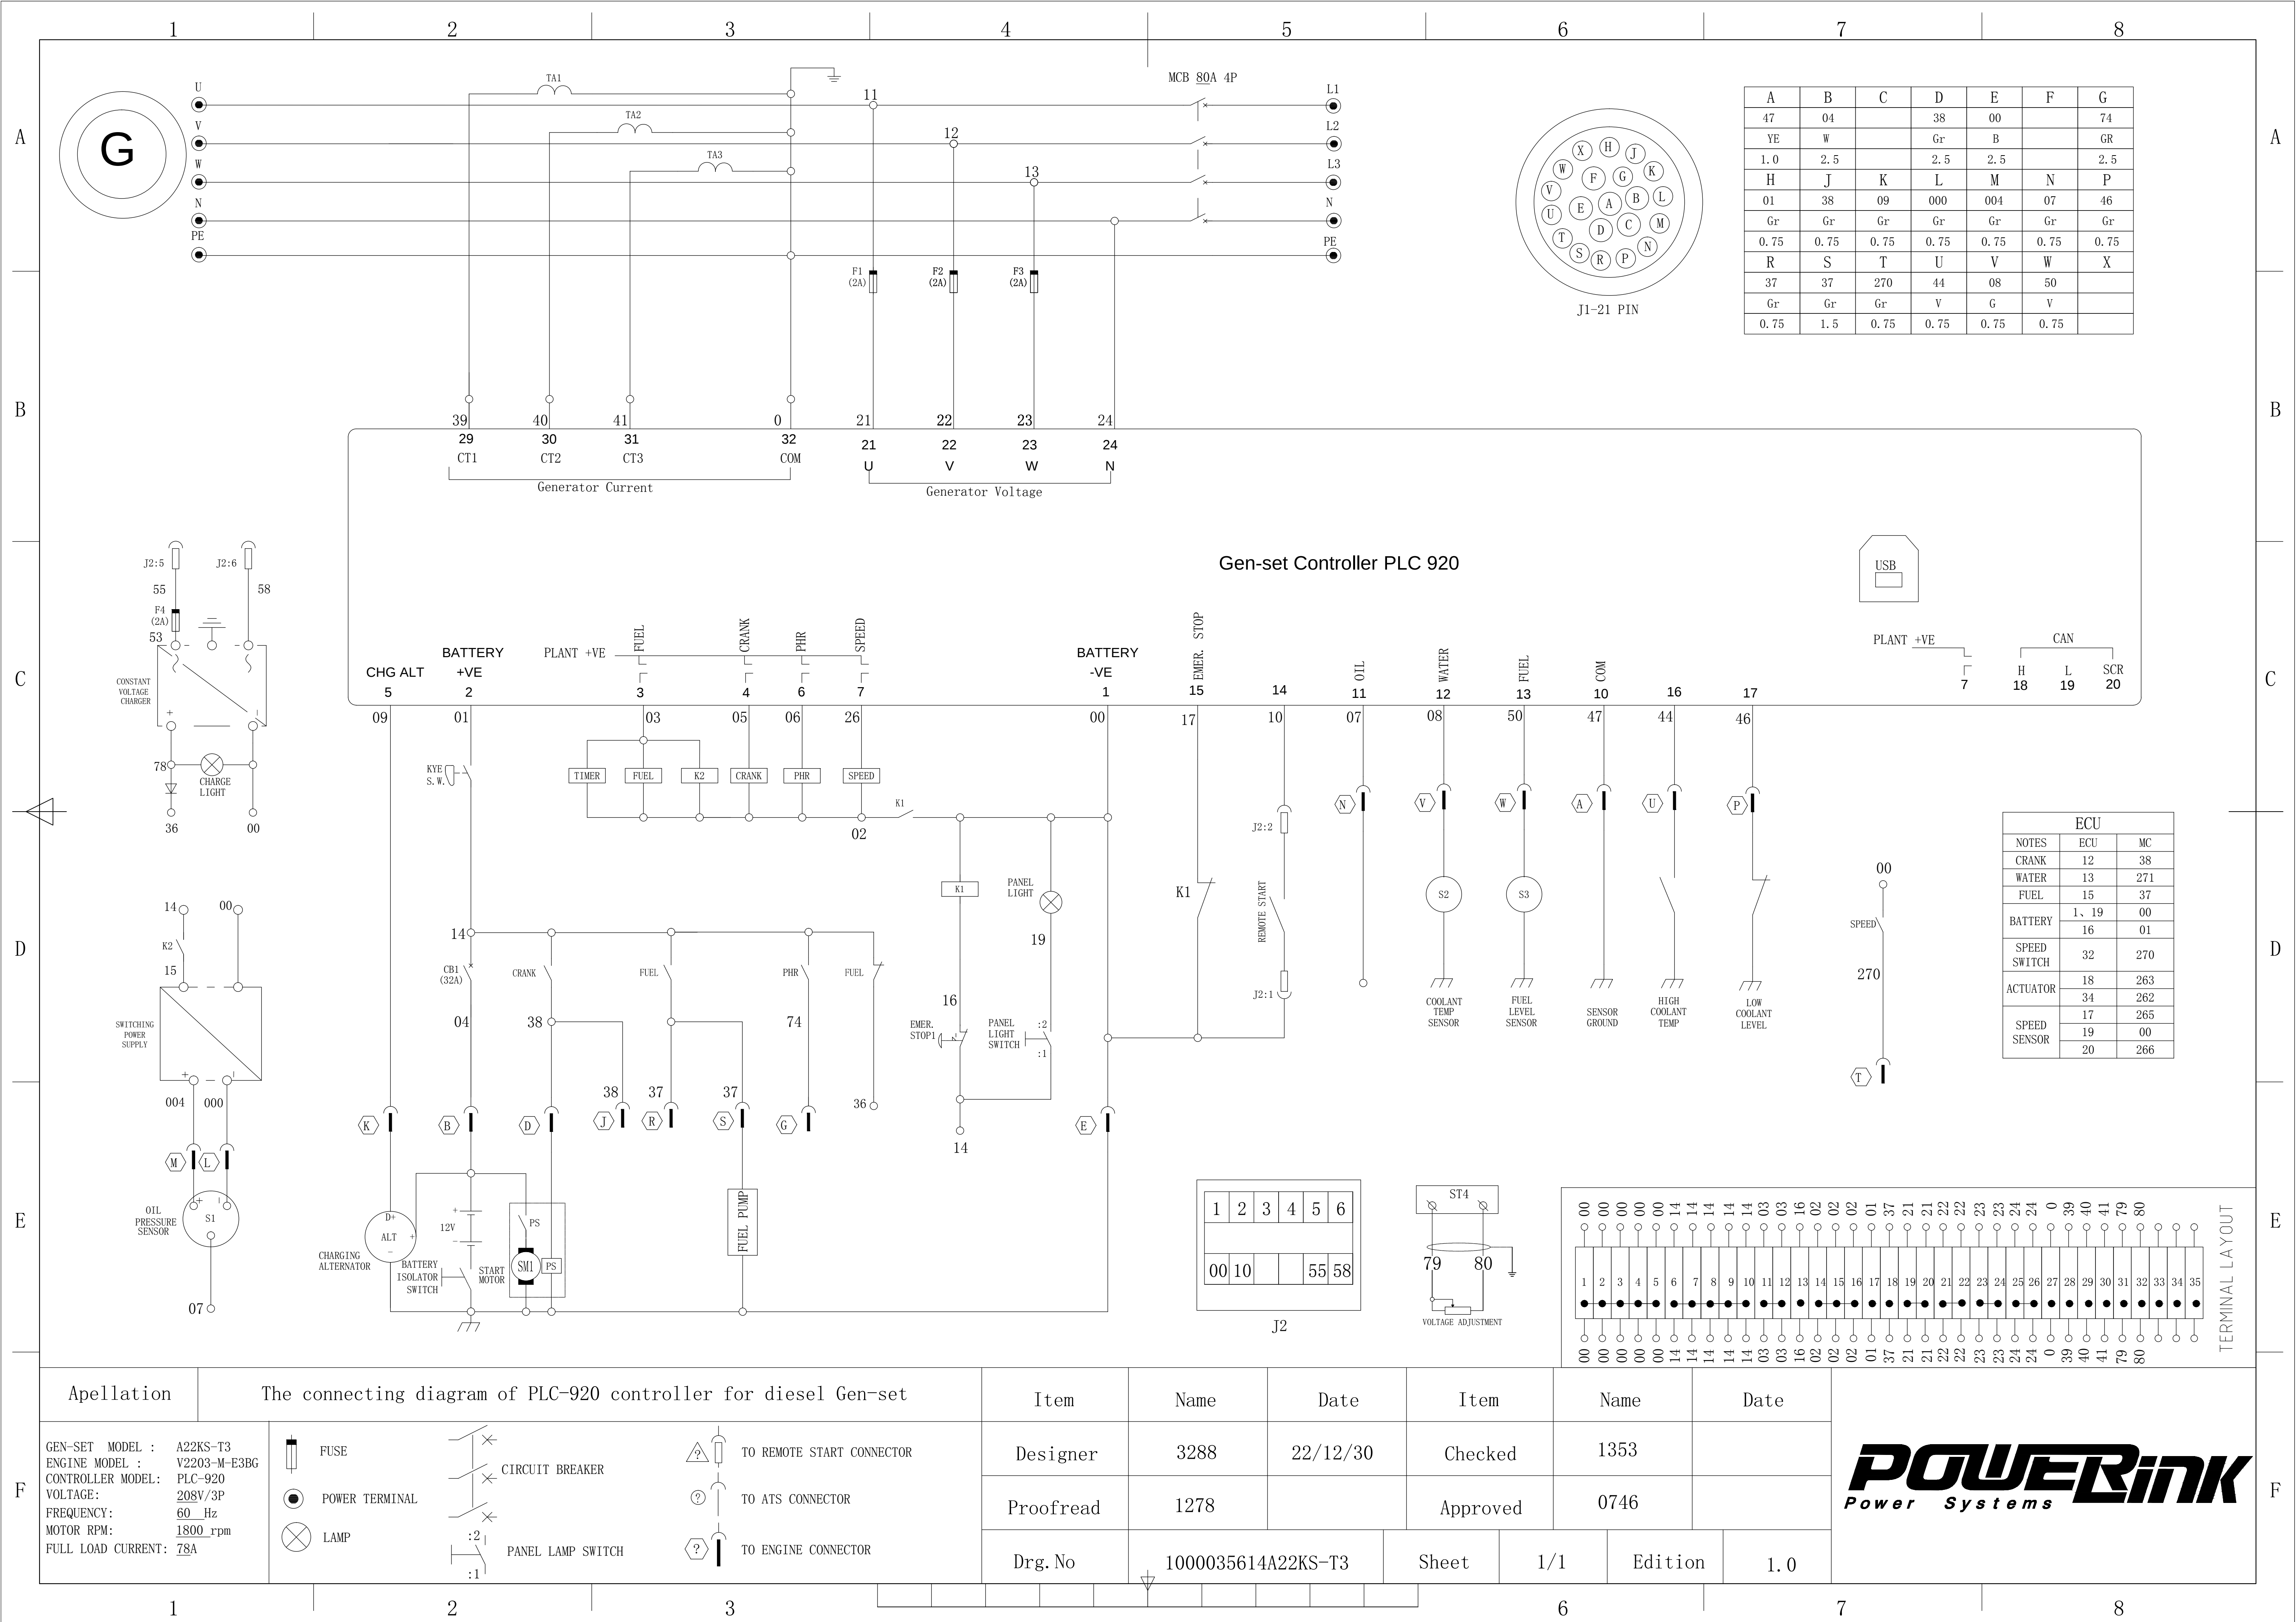


A	B	C	D	E	F	G
47	04		38	00		74
YE	W		Gr	B		GR
1. 0	2. 5		2. 5	2. 5		2. 5
H	J	K	L	M	N	P
01	38	09	000	004	07	46
Gr	Gr	Gr	Gr	Gr	Gr	Gr
0. 75	0. 75	0. 75	0. 75	0. 75	0. 75	0. 75
R	S	T	U	V	W	X
37	37	270	44	08	50	
Gr	Gr	Gr	V	G	V	
0. 75	1. 5	0. 75	0. 75	0. 75	0. 75	

ECU		
NOTES	ECU	MC
CRANK	12	38
WATER	13	271
FUEL	15	37
BATTERY	1, 19	00
	16	01
SPEED SWITCH	32	270
	34	262
ACTUATOR	17	265
	19	00
SPEED SENSOR	20	266

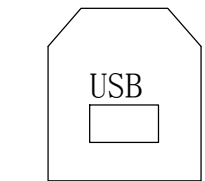

PLANT +VE 7
CAN H 18 L 19 SCR 20

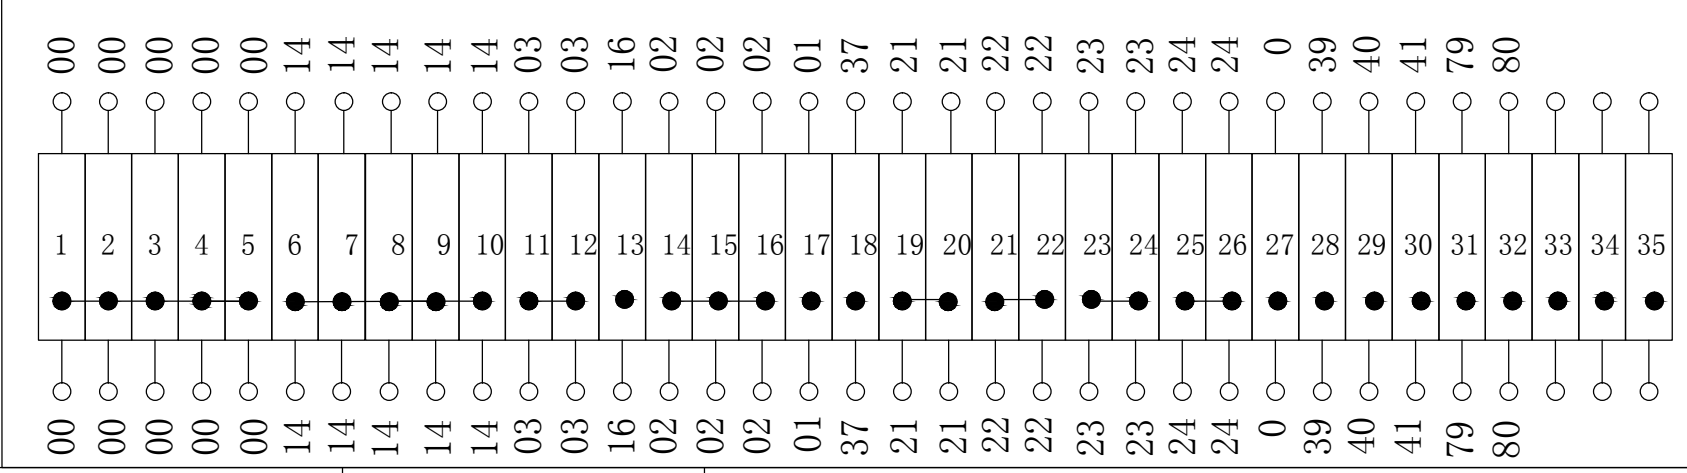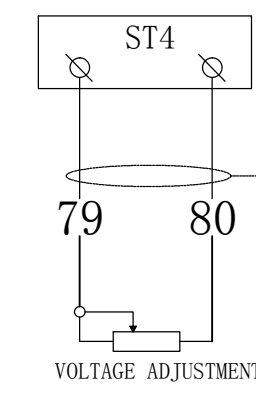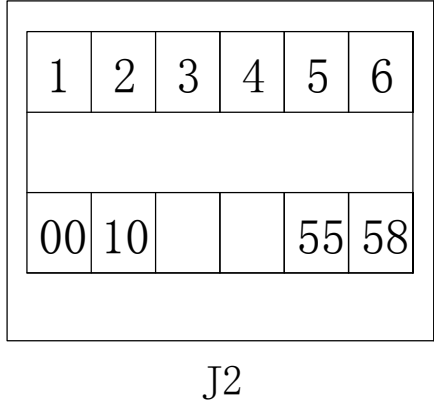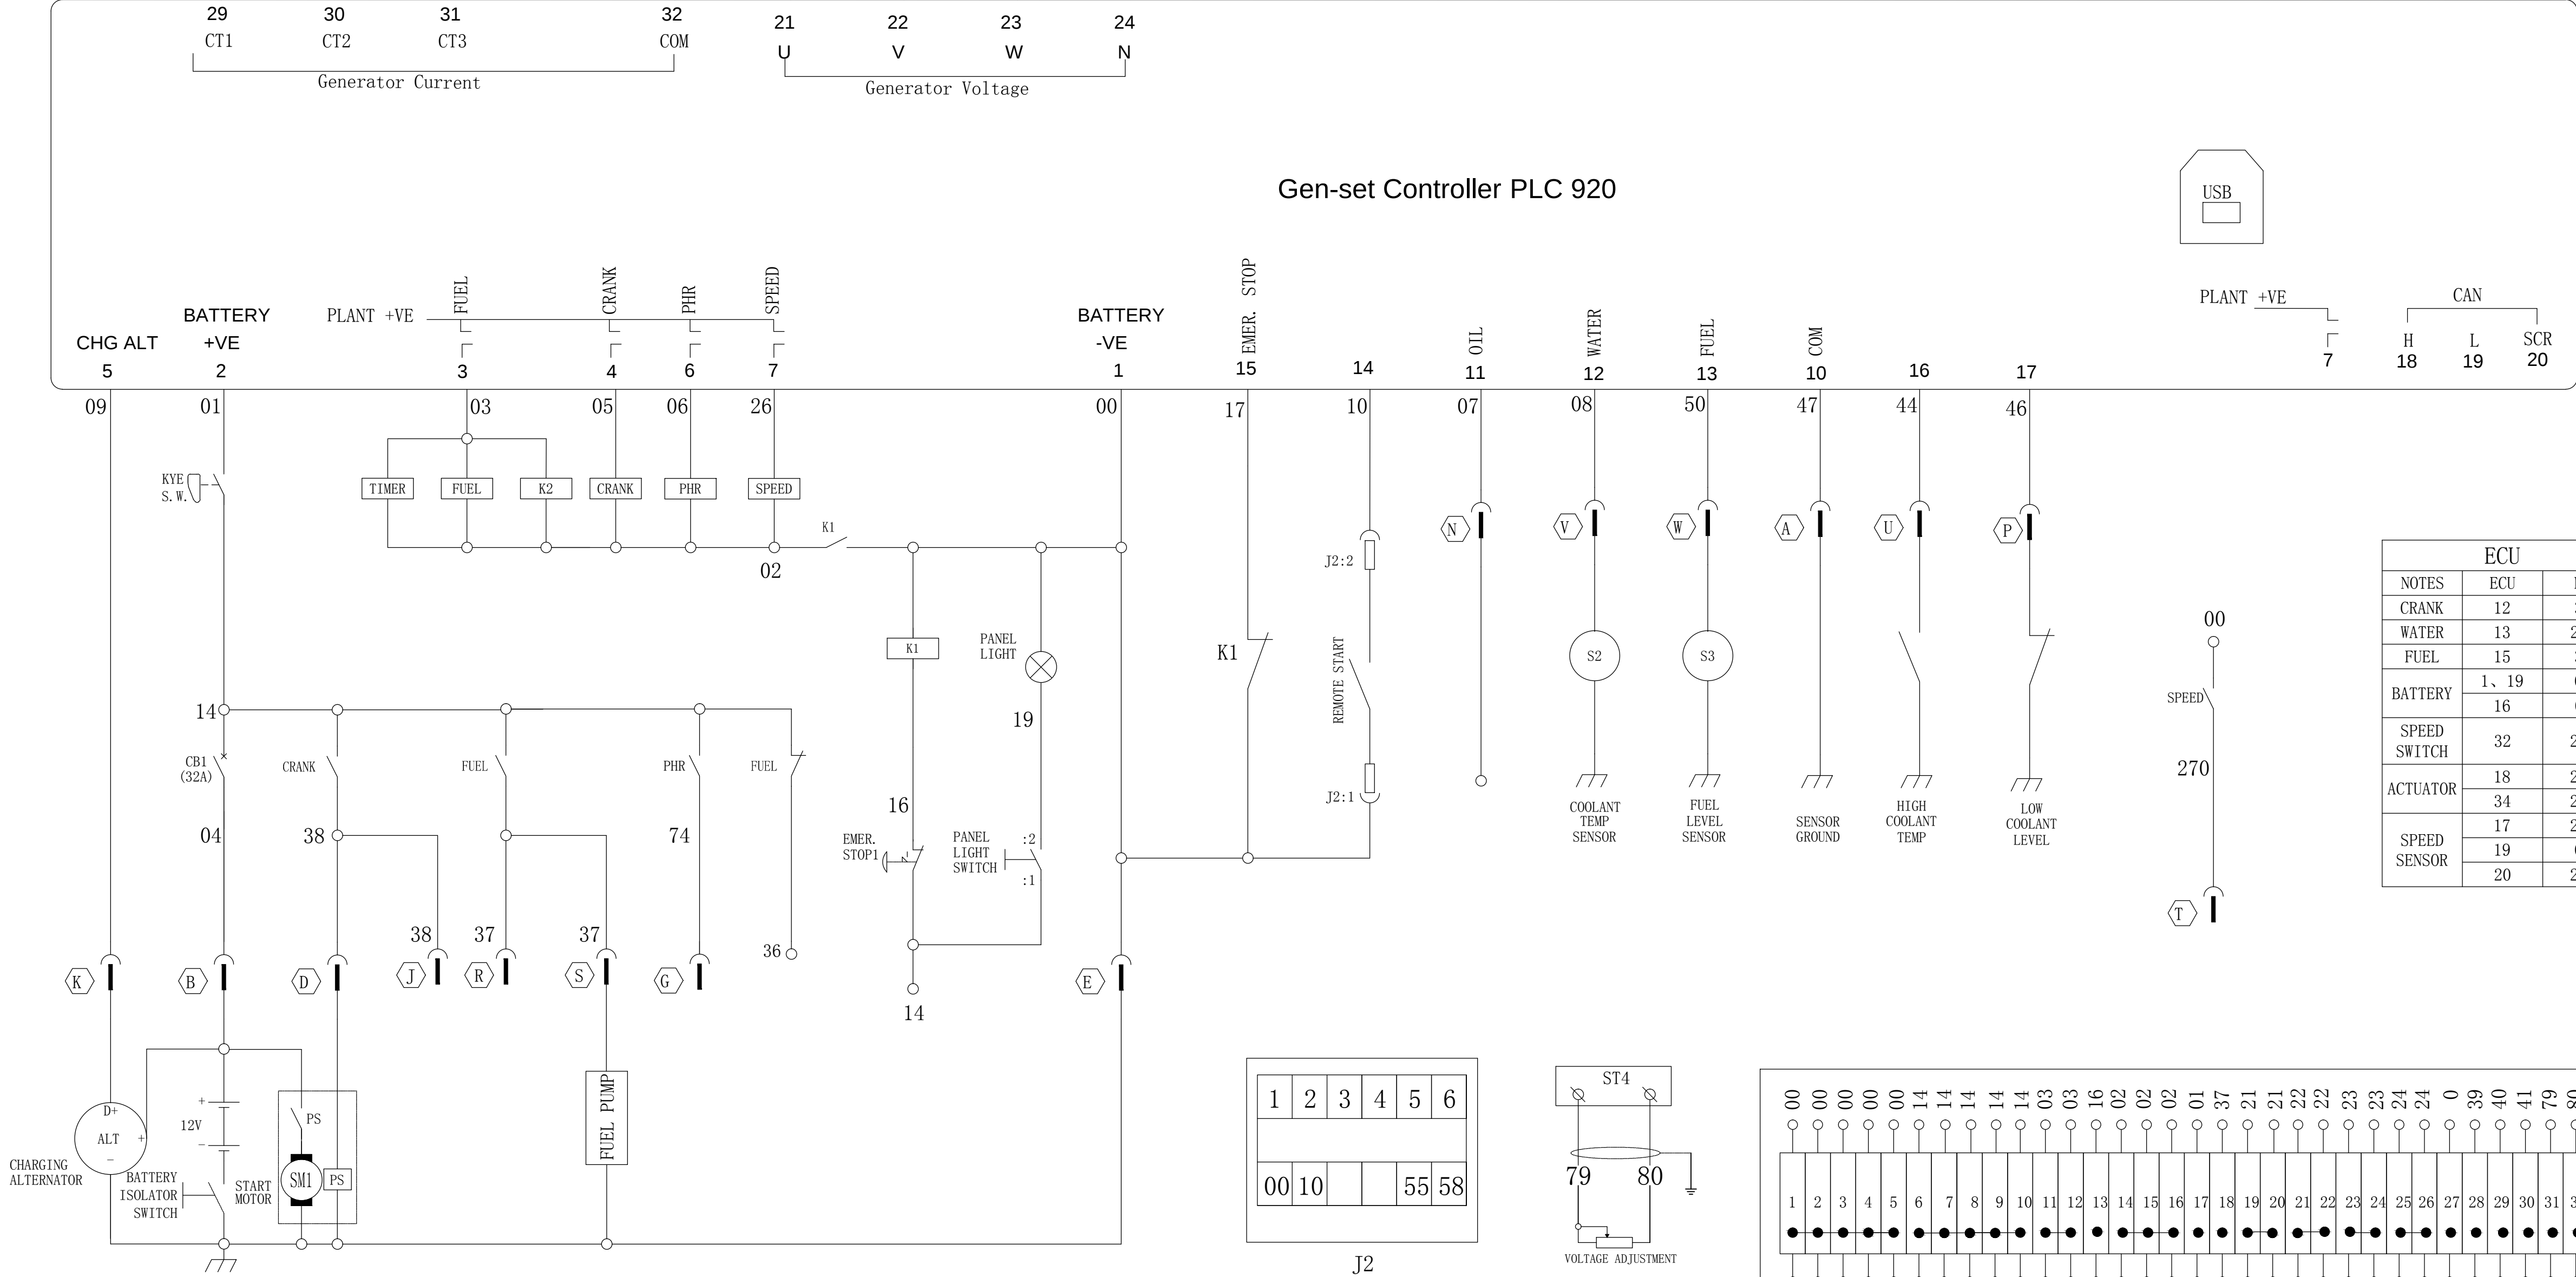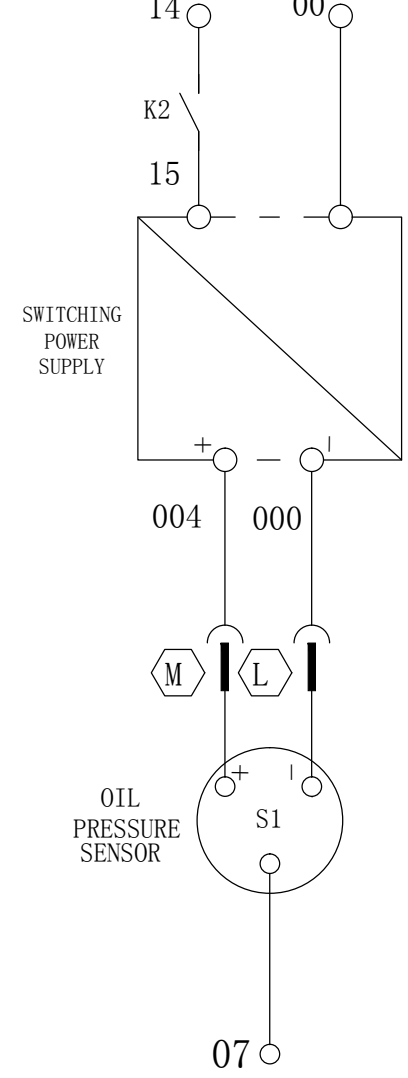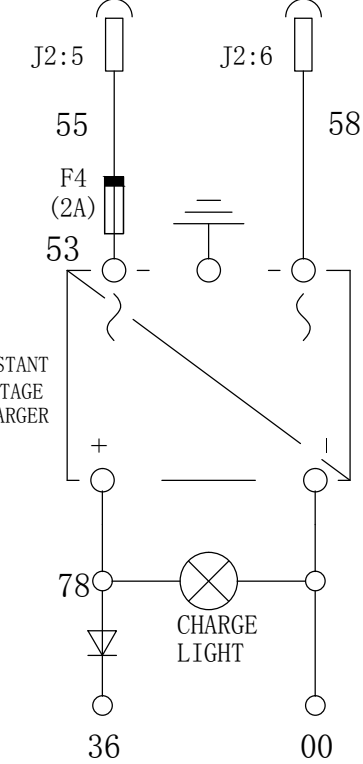

Apellation	The connecting diagram of PLC-920 controller for diesel Gen-set			Item	Name	Date	Item	Name	Date				
GEN-SET MODEL : A22KS-T3 ENGINE MODEL : V2203-M-E3BG CONTROLLER MODEL: PLC-920 VOLTAGE: 208V/3P FREQUENCY: 60_Hz MOTOR RPM: 1800_rpm FULL LOAD CURRENT: 78A	FUSE POWER TERMINAL LAMP	CIRCUIT BREAKER PANEL LAMP SWITCH	TO REMOTE START CONNECTOR TO ATS CONNECTOR TO ENGINE CONNECTOR	Designer	3288	22/12/30	Checked	1353					
				Proofread	1278		Approved	0746					
				Drg. No	1000035614A22KS-T3		Sheet	1/1	Edition	1. 0			

